

WETTASK* Wiping System

UNPACKING & LOADING INSTRUCTIONS



Product Code: 7919

Refillable, fully enclosed wiping system giving you greater control over solvent use and wiping costs. Upgraded opening system and inclusive visual management kit for more efficient working in a safer environment. Safe, simple and reliable for improving health & safety, productivity and profitability.



Bucket

Refillable bucket, stackable to ensure optimum storage.



Lid

Two component lid system with main lid to safely close the bucket and additional flap for flexible sheet removal and closure between uses.



Rings

Two rings with different apertures for efficient use and dispensing of sheets depending on the chosen roll.




Colour coded plastic inserts

Easy to affix to top of lid for direct identification and permanent control of used solvent.



Colour coded stickers

Flexible system of individual stickers for wrapping around the bucket to identify the type of solvent used at a glance

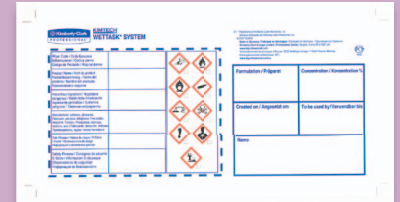

Hazardous label

For filling in and affixing to the back of the bucket to directly and clearly identify all relevant information (wiper code, product name, hazardous ingredient, risk phrases etc).



KIMTECH* / WETTASK* SSX Cloths

Recommended ring when using this product:

Product Code:	7764
Format:	Centre-feed rolls
Sheet size:	31.7 x 30.5 cm
Case Quantity:	6 x x 60



Aerospace Chemical Application Cloths

Recommended ring when using this product:

Product Code:	38665
Format:	Centre-feed rolls
Sheet size:	32 x 30 cm
Case Quantity:	6 x x 60



Aerospace Abrasive Surface Cloths

Recommended ring when using this product:

Product Code:	38667
Format:	Centre-feed rolls
Sheet size:	32 x 31 cm
Case Quantity:	6 x x 60



WETTASK* Wiping System

UNPACKING & LOADING INSTRUCTIONS

**1.
Step**



UNPACKING

Remove packaging and adhesive strip of the roll.

Remove lid and insert wiper roll into dispensing bucket.

**2.
Step**




ADD SOLVENT & CHANGE RING

Pour your solvent / disinfectant into centre of roll.*

Insert the required ring into the mouth of the lid.
(see recommendation in table on page one)

**3.
Step**

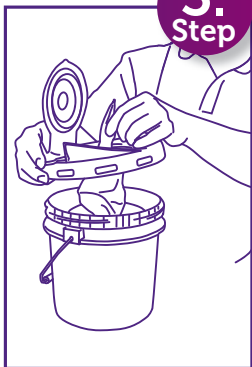


TEAR OFF

Thread wipers from the centre of the roll through the loop ring.

Please ensure that two plies of the sheet are threaded through the aperture.

**4.
Step**

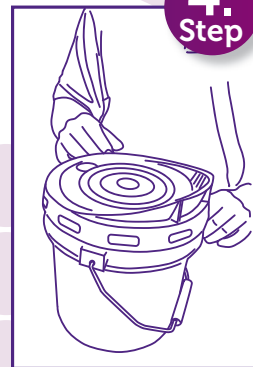


RE-SCREW LID & WAIT

Screw the lid back onto the top of the bucket and close the flap in the centre of the lid.

Allow minimum 20 min. for liquid to soak through the roll before you start dispensing the sheets.

**5.
Step**

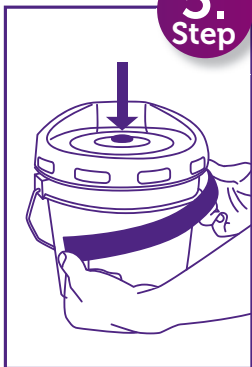


VISUAL MANAGEMENT

In the meantime affix the coloured plastic insert to the top of the lid and stick the coloured sticker around the bucket in order to identify the type of solvent used.

There are five different colours available in the visual management kit for you to choose from.


**6.
Step**

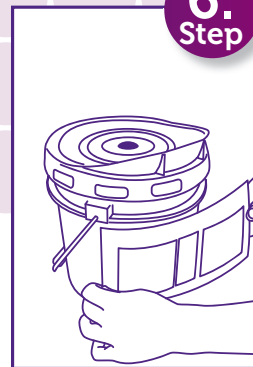

VISUAL MANAGEMENT

Fill in the hazardous label and stick it to the back of the bucket.


**7.
Step**

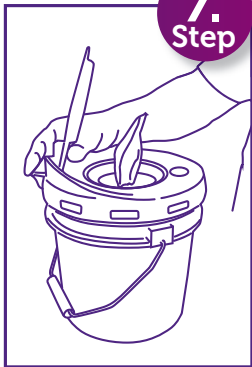

CHECK

When bucket is clearly labelled and the solvent used has soaked in, the wiping system is ready to use.

**8.
Step**

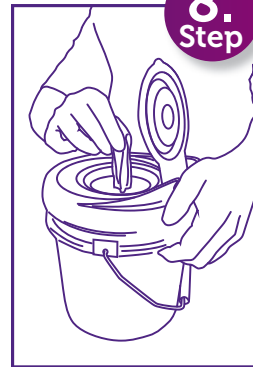

READY TO USE

Pull out the sheets needed and keep the flap closed between uses.

* The amount of liquid used depends on your specific end use requirement. We recommend that you initially fill the system with either 1.75L of disinfectant or 2.0L of solvent. Then check your process and add more if required. The wiper can absorb up to 5 times its own weight.